



## How to Program the INT-422-3 for use with TV Smart Hubs

After you program the standard TV Device Code for your brand from our Device Code List, the instructions below will allow you to access the features of the Smart Hub for that brand. These will not work for every model and in some cases could have adverse reactions if used with a model that is unsupported. In most cases, these can be used with the first couple of codes given for each brand in their Device Code listing.

- *Press the Mode for the TV with the Smart Hub (i.e. A,B,C,D) after the TV device code is programmed.*
- *Press the SET button until the LED blinks twice.*
- *Enter 994 and then press the Set button and release.*
- *Enter XXXXX and then press the Display button. The LED should blink twice*
- *This will program the Display button to access the TV's Smart Hub when pressed in the TV mode (A,B,C,D)*

<b><u>Brand</u></b>	<b><u>Code (XXXXX)</u></b>
Haier-----	00639
Hisense-----	00551
Insignia-----	00545
JVC-----	29247
LG-----	00516, 00683
Magnavox-----	61553
Panasonic-----	47149
Philips-----	63428
Samsung-----	00521
Sanyo-----	00279
Sharp-----	43500
Sony-----	14917
TCL-----	00629, 00492
Toshiba-----	52389
VIZIO-----	00344